

USER MANUAL



Santa Maria

This machine utilizes firewood and charcoal as fuel.

3 Year limited warranty.

Stainless steel cooking grates (SS 304).


Charcoal platform.

Front platform.

Cooking grates level adjusting steering.


Powder coated surface.

⚠ THIS GRILL IS FOR OUTDOOR USE ONLY!

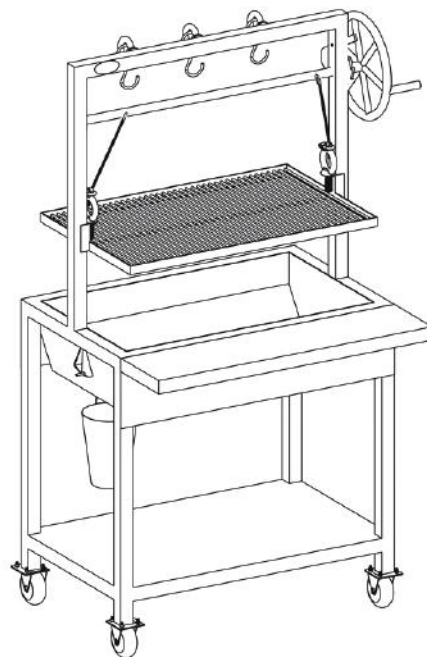

Thank you for choosing Lanka Grills product. Please read this user manual before operation to obtain insight to this product in terms of features, operation, maintenance, safety and specifications. Follow all instructions and warnings when using this BBQ Grill.

Inside the box...

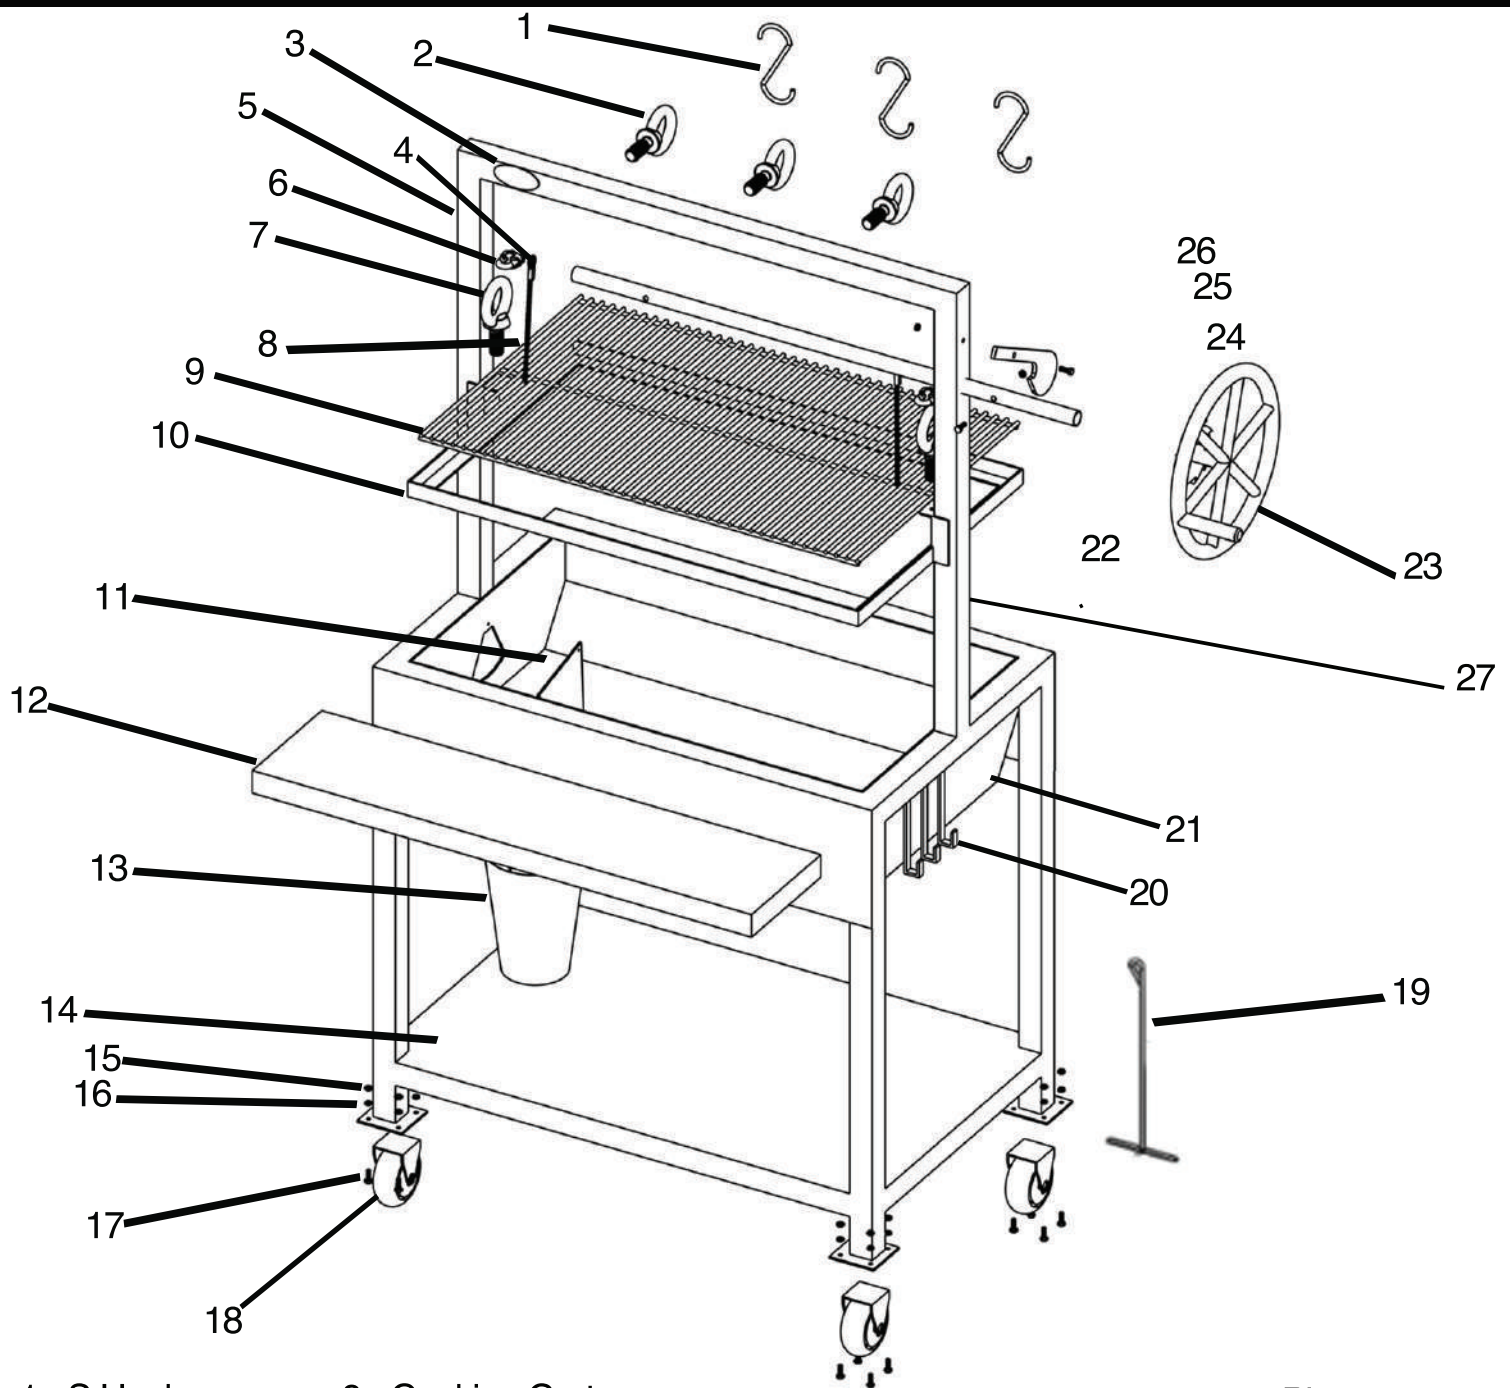

1 - S Hook

2 - Eye Bolt

3 - Badge

4 - Ferrule

5 - Chassis

6 - Bull Dog Clip

7 - Eye Bolt

8 - Wire Rope

9 - Cooking Grates

10 - Grill Holder

11 - Damper

12 - Front Platform

13 - Bucket

14 - Bottom Platform

15 - 6mm Nut

16 - 6mm Spring Washer

17 - 6mm Bolt

18 - Caster Wheel

19 - Charcoal Regulator Stick

20 - J Hook

21 - Fire Pit

22 - Steering Bolt

23 - Steering with Stopper

24 - Pipe


25 - Stopper Bolt

26 - Stopper

27 - Column

Model name, part number with part name is necessary when ordering spare parts.

Assembly Guide

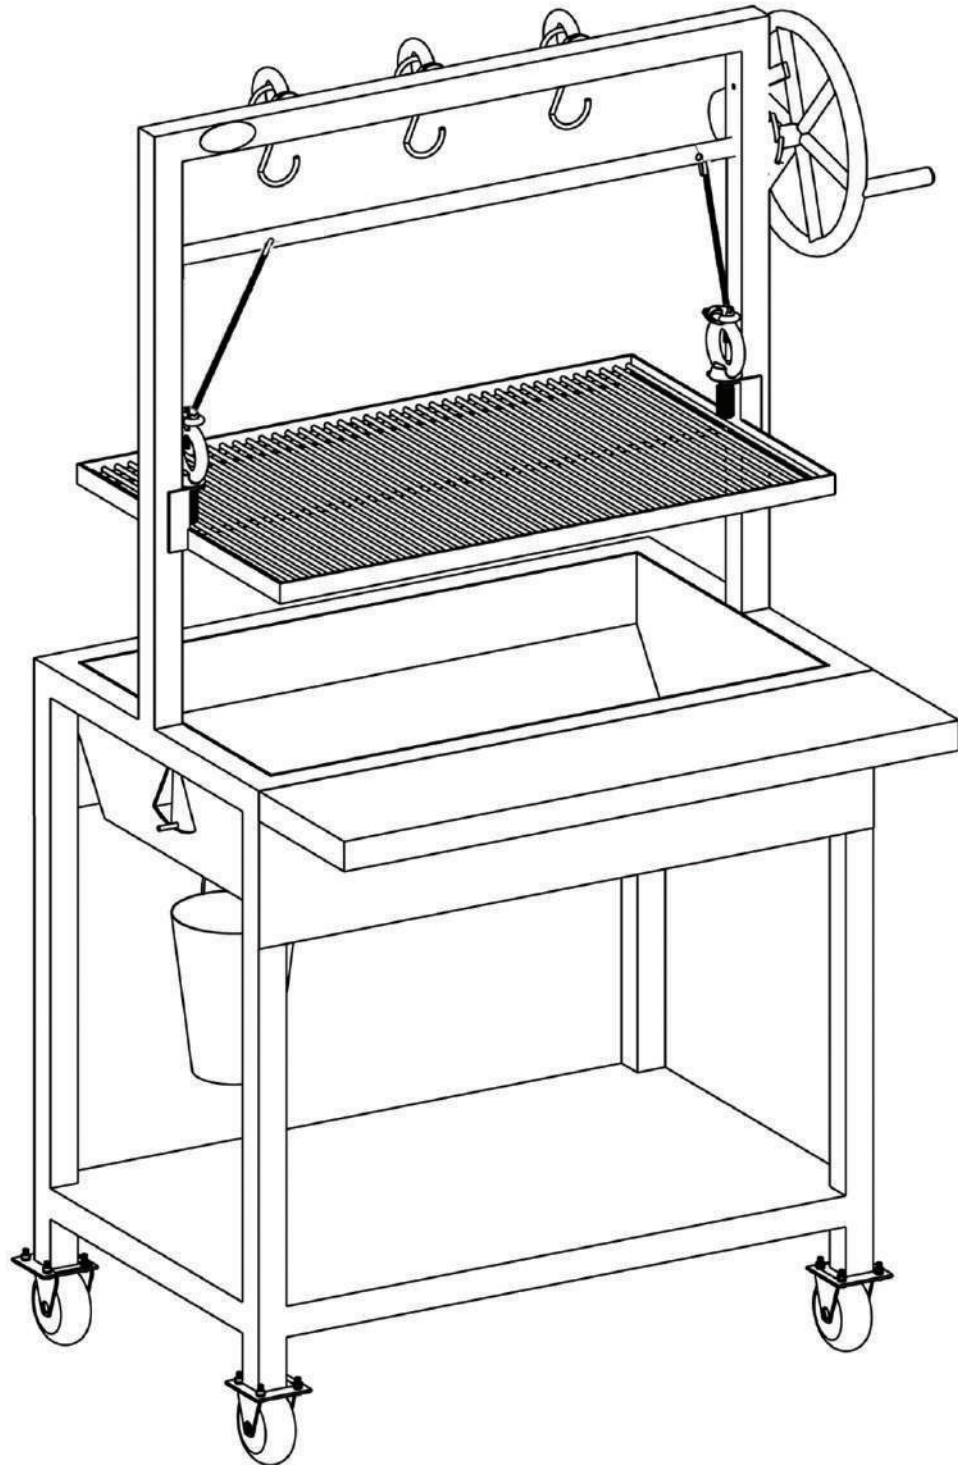

FULLY ASSEMBLED!



WARNING!



Always hold the steering handle , while steering. Leaving it may cause damage.



Do not store or use gasoline, alcohol or any other flammable liquids in the area surrounding the grill area.



Some parts may contain sharp edges. Wear protective gloves during operation.



The grill will be extremely hot during operation. Do not touch the surfaces of the grill while operation.



Minimum 1 inch gap between grill body and charcoal on all 4 sides are compulsory when charcoal grilling.



Do not let children under 16 years to operate this grill. Keep children and pets away from this machine at all times.



Grease the pipe edges, columns, sprocket and steering once a month.



Never operate this grill within 10 feet of any structure, wall and etc. Never operate within 20 feet of any flammable liquid or materials.



If a fire occurs keep away from the grill and call your fire department.



Wash the SS cooking grates before use!
Wash your hands after using this product!



Do not attempt to repair or alter any part of this product. Any modification to this assembly will revoke your warranty and create the risk of gas leaks and fire.



Do not regulate the fire wood with hands but with the regulator stick.



Pre heat the grill for 10 minutes prior to use. Curing of coating will produce an odour on first time.



Clean the product more often. Do not wash using high pressure water. Wiping the surface through wet cloth, atleast 3 hours after usage is recommended. Make sure there are no bristles on the cooking grates before grilling.



Always have the drip bucket while grilling.



Never use the grill indoor! Always use it outdoor in a very well ventilated space.



Use heat resistant gloves while operating the grill.



Fully insert the SS hook to the meat or vegetables to prevent falling.




The fasteners of components must be tightened fully before usage if removed.




Do not operate the grill while the wire rope is slack. Lower the grill and grease the columns.

FOR OUTDOOR USE ONLY!


STARTUP GUIDE

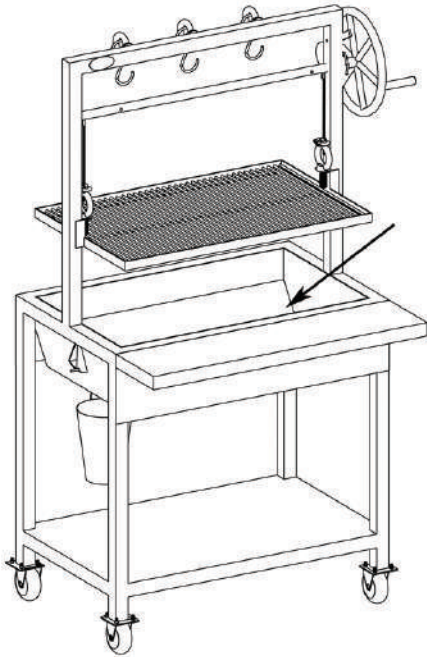


Step 1 - Make sure the fire pit is free of dusts, oil, grease & etc. & the cooking grate is in top position.

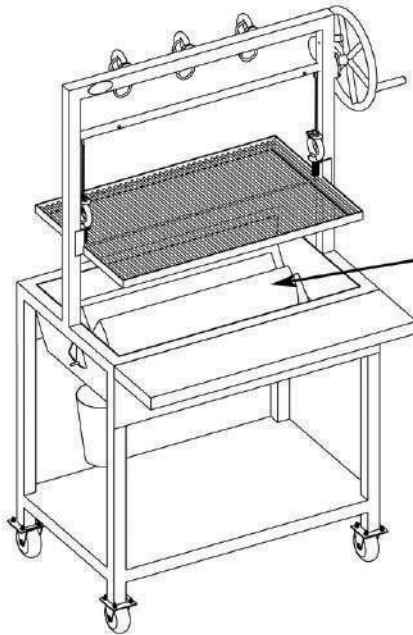


Step 2 - Insert the firewood into the fire pit. (Charcoal can be used to build fire.)

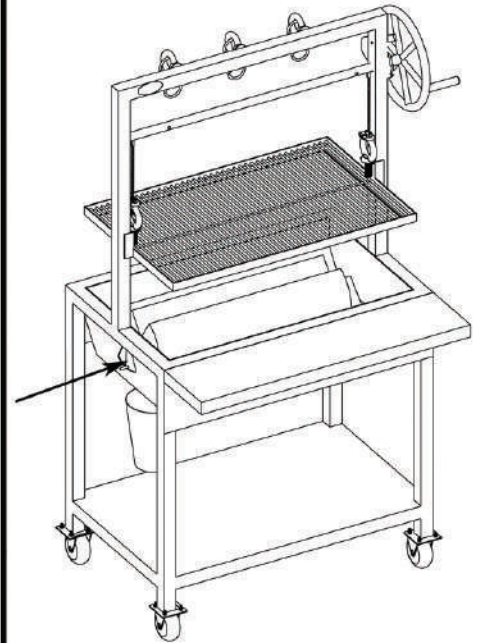


Step 3 - Adjust the damper to maintain a consistent grilling temperature.

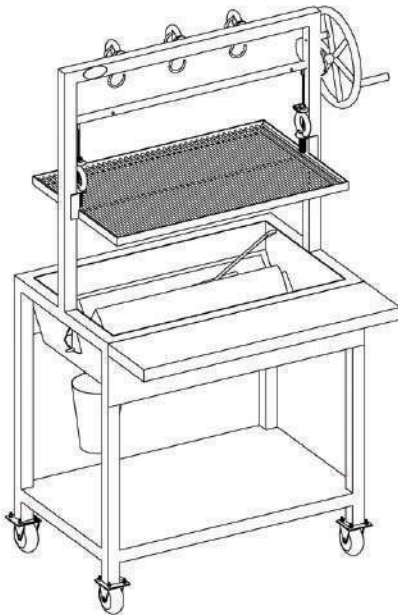

Step 4 - Use the regulator stick to regulate the firewood inside the fire pit.

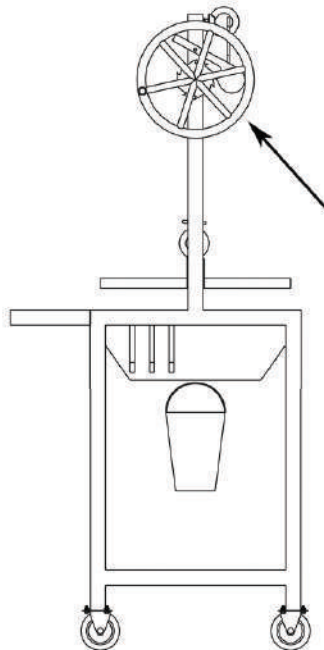

Step 5 - Use the steering to adjust the position of the SS cooking grate. Rotate Anti-Clockwise to raise the grill. Rotate Clockwise to lower the grill. Lock the position using stopper.

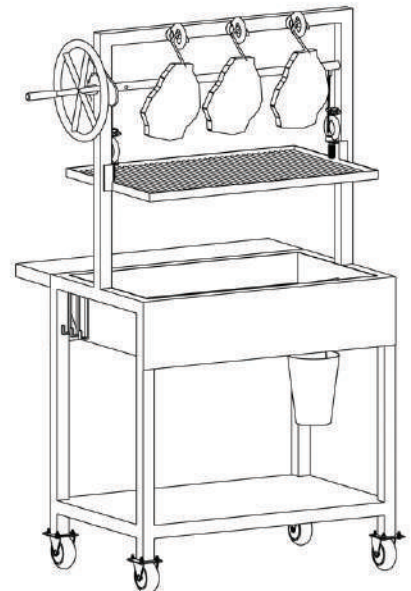

Step 6 - Hang the meat on the S hooks.

Grill Maintenance

- Allow the grill to cool before cleaning.
- When cleaning the grill, cover the area, brush out the residues and ash and wipe the body with wet cloth.
- SS Cooking grates may be cleaned with wire brush, rinse with water and air dry before cooking again. (make sure there's no loose bristles on the cooking grates after cleaning).
- Do not place meat on the charcoal tray.
- Cook meat and poultry throughoutly to kill bacteria.
- Apply grease to columns and sprocket wheel once a month to ensure smooth operation.
- Use a food thermometer to measure the meat temperature.
- Use a grill cover to cover the grill when it's exposed to extreme weather conditions. This will increase the life time of the grill.
- Grease the columns frequently to prevent resistance while moving the grill.



Minimum gap of 1 inch between charcoal & grill body on all 4 sides are compulsory! (Charcoal Grilling)



Clean the meat drippings (fat) & charcoal ash from the machine, grates and grill body & Dispose the wastages from drip tray after each cooking. Failure to do so could cause a grease fire. (Extreme rise of flame height), Hence **discoloration of powder coating**.



Do not pour any liquid (liquor, alcohol, wine, drinks & etc.) inside the grill while grilling. This will cause explosion!



If one of the wire rope is slack while moving release the grill holder to bottom position and grease the columns.

Grill Care & Use

Limited Warranty

This warranty only applies to units purchased from an authorized retailer.

A dated sales receipt WILL be required for warranty service.

This limited warranty applies only to the functionality of the product and **does not cover** cosmetic issues such as dents, scratches, powder coating peel off, corrosions or discoloring by heat, abrasive and chemical cleaners or any tools used in the installation or assembly of the product, surface rust, or the discoloration of stainless steel surfaces. Powder coating is not warranted and will require touch up. **RUST** is not considered a manufacturing or materials defect.

MANUFACTURER WILL NOT PAY FOR:

1. Transport cost for warranty and replacement parts
2. Damage, failures, or operating difficulties resulting from accident, alteration, careless handling, misuse, abuse, fire, improper installation or maintenance, use of products for installation not approved by the manufacturer.
3. Any food loss due to product failures or operating difficulties.
4. Pickup and delivery of your product.
5. Repairs to parts resulting due to unauthorized modifications made to the product.
6. The removal or reinstallation of your product

Dealers, retailers or any others selling this product **do not have any authority** to make any additional warranties or promises in addition to or inconsistent with those stated above.

Manufacturer's maximum liability at any event, **will not exceed** the purchase price of the product paid by the original customer.

The warranty will expire, 3 years from the date of purchase.

3 Year Limited Warranty



www.lankagrills.lk
info@lankagrills.lk

© Designed and Manufactured by Lanka Grills.
No.581, Negombo Road, Wattala.

©This product is protected under the National Intellectual Property Office of Sri Lanka.